



Universal Van Galley for Transit & Promaster




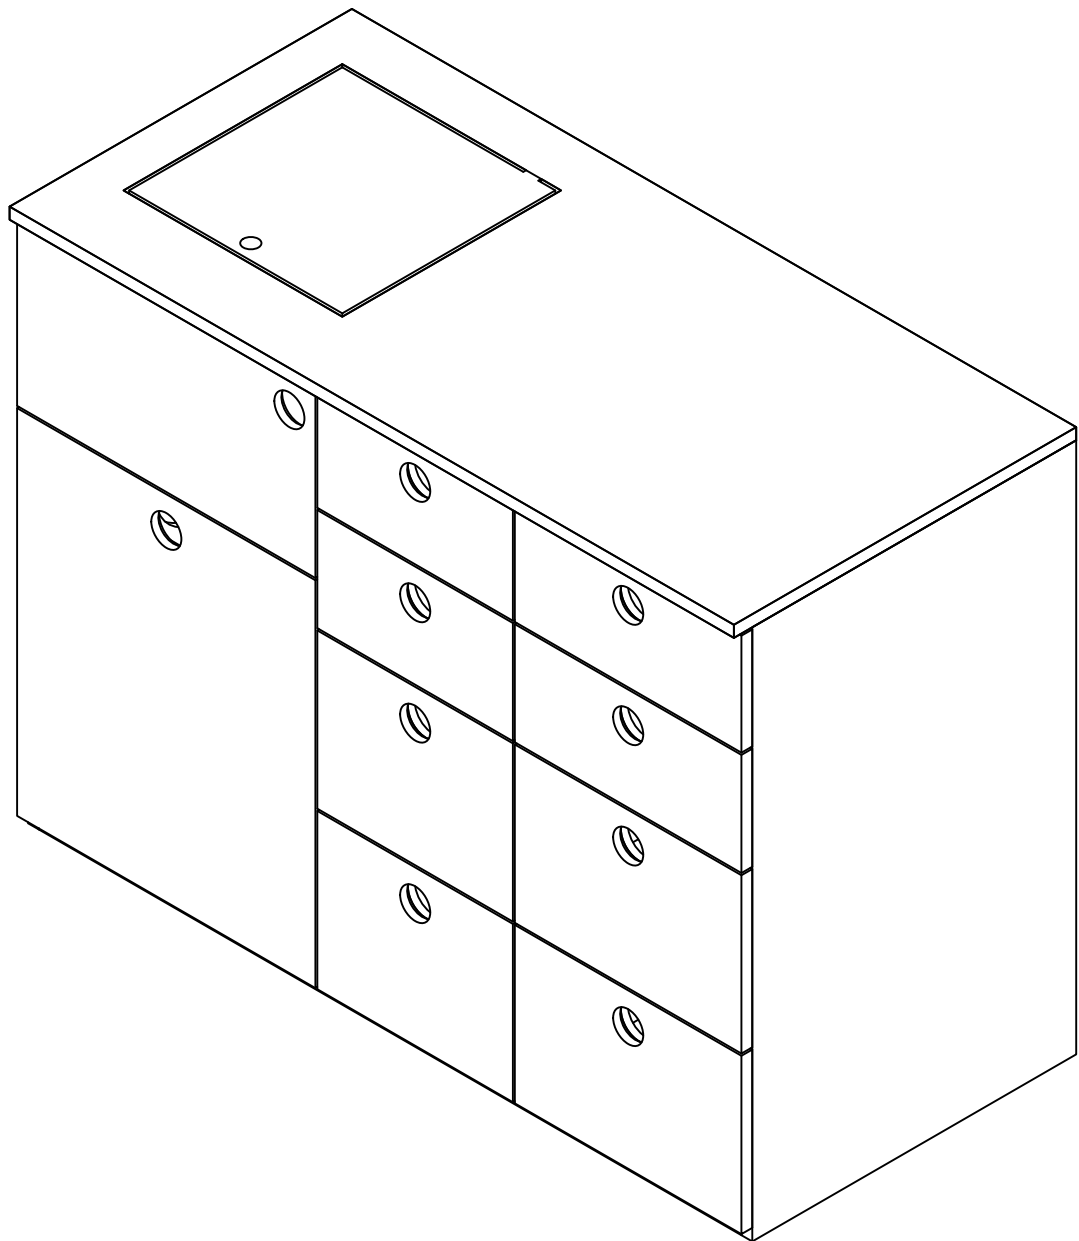


52x



86x

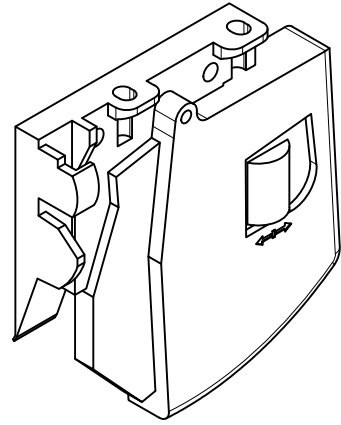











18x

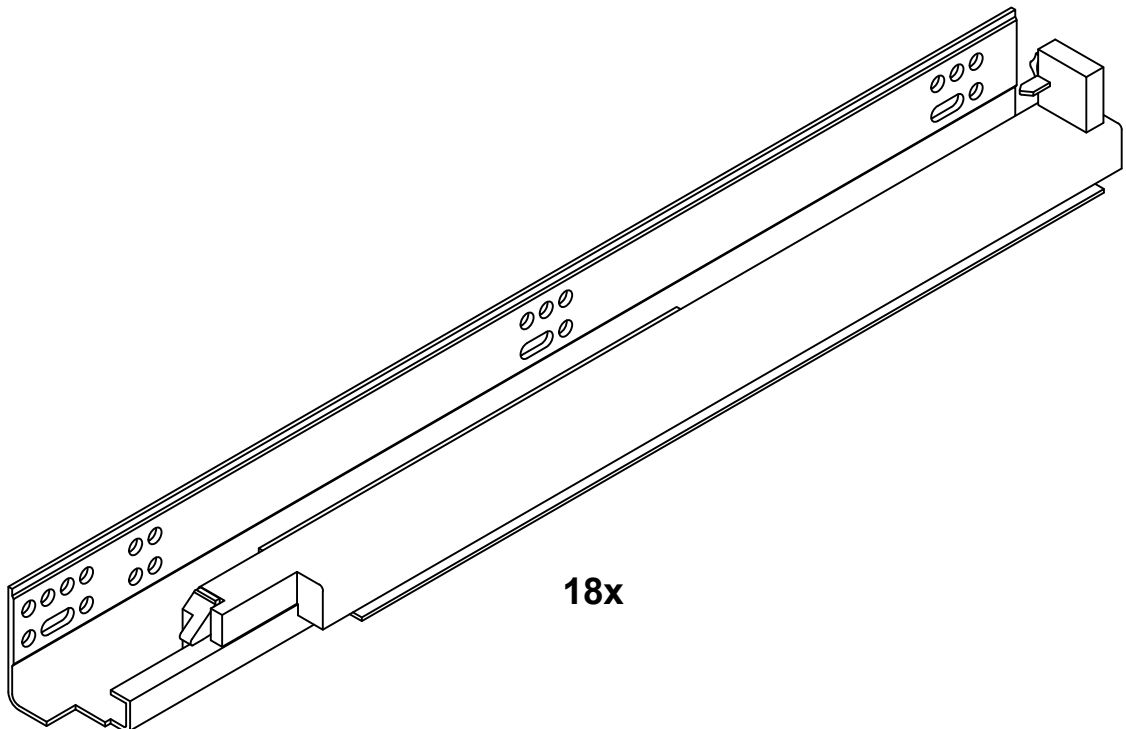

18x







1

Insert cabinets into body parts

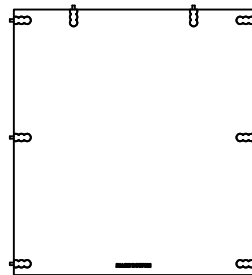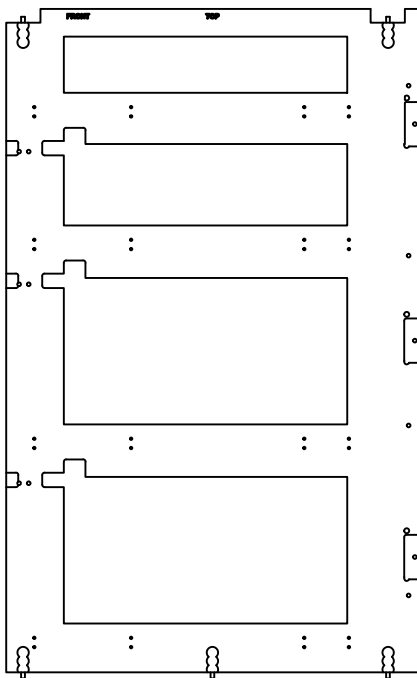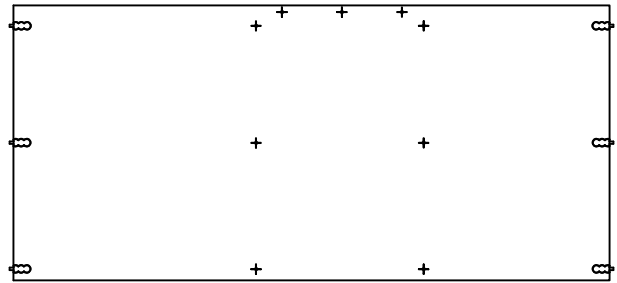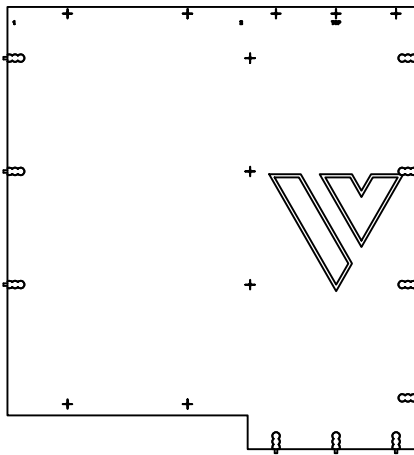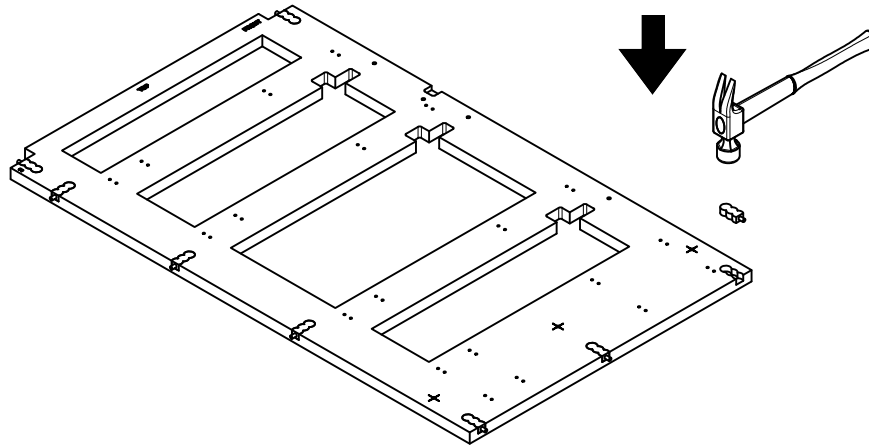


2

Insert cabinets into drawer parts

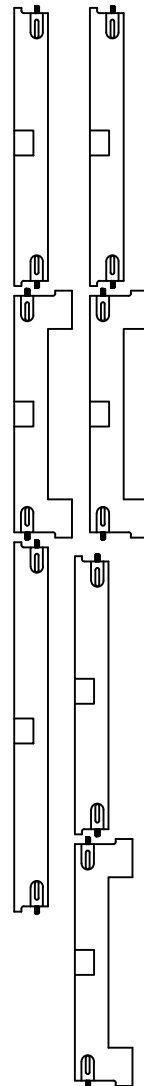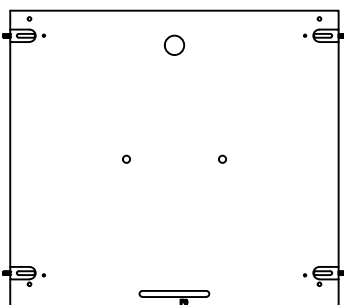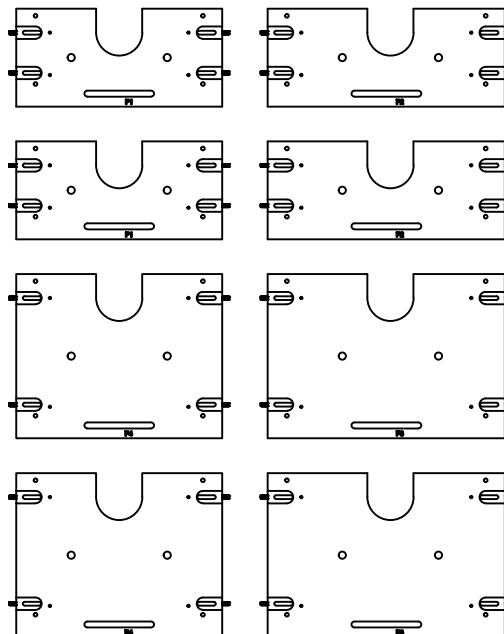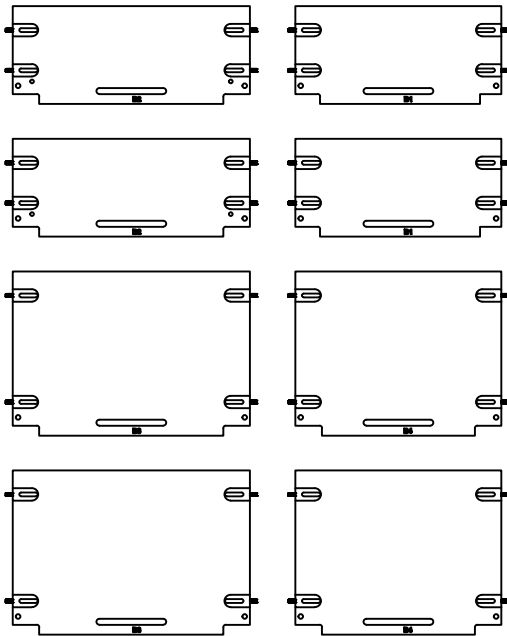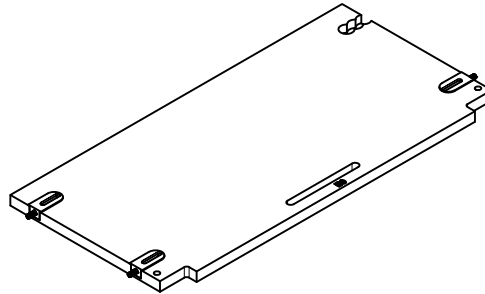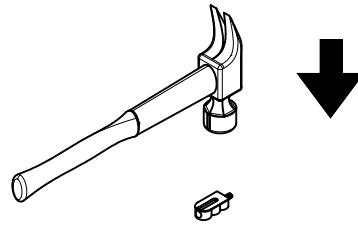


3

Combine rear to bottom

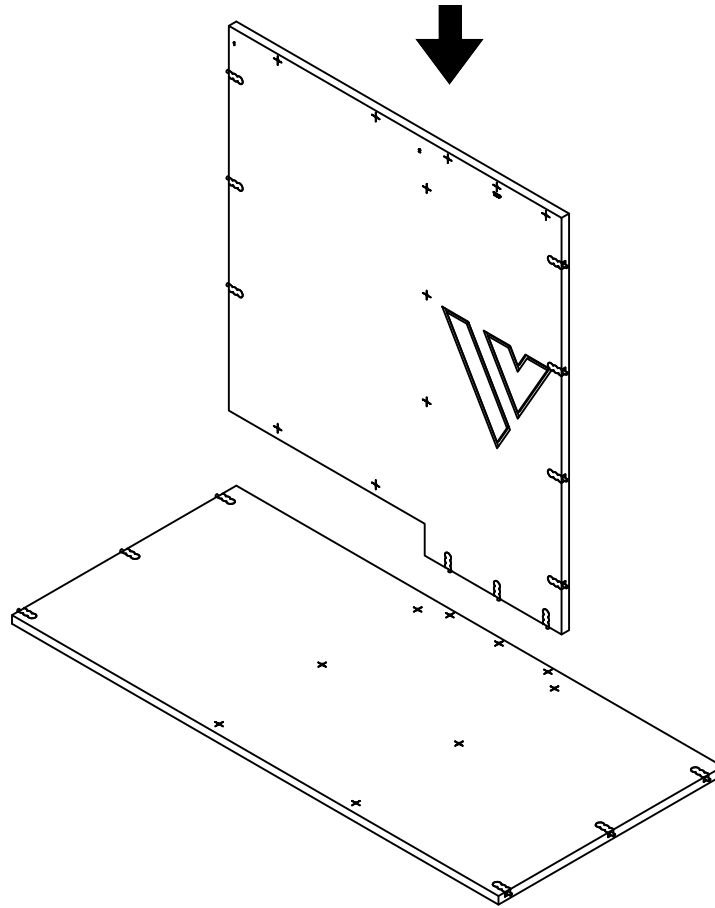


4

Combine footwell

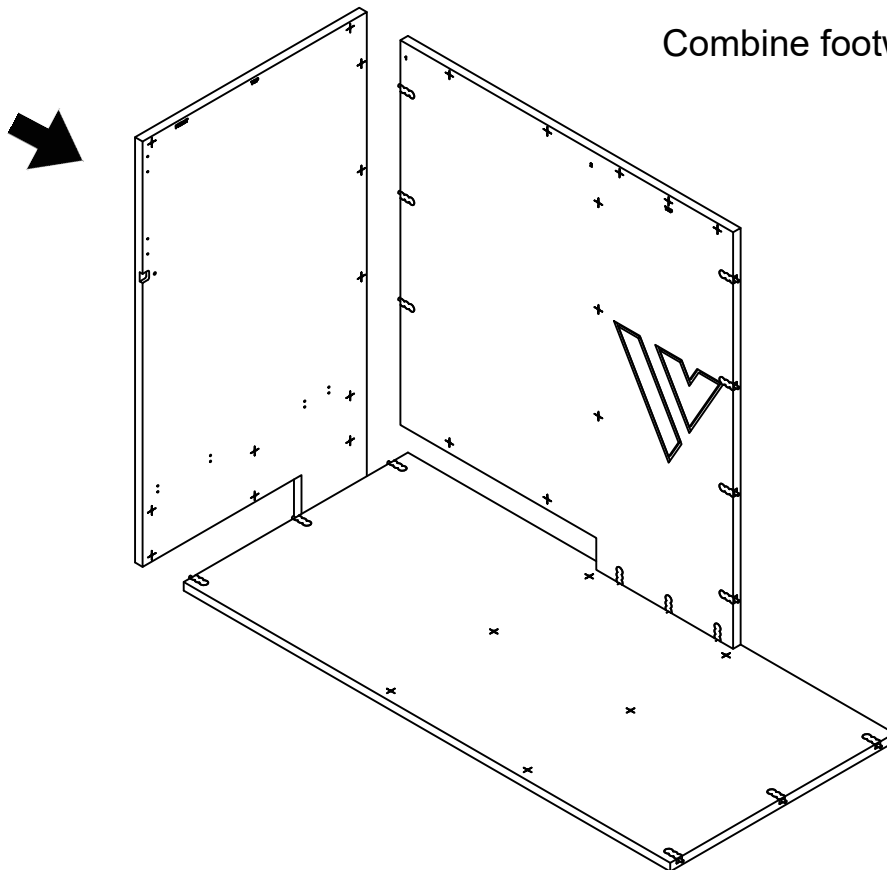


5

Combine rear supports

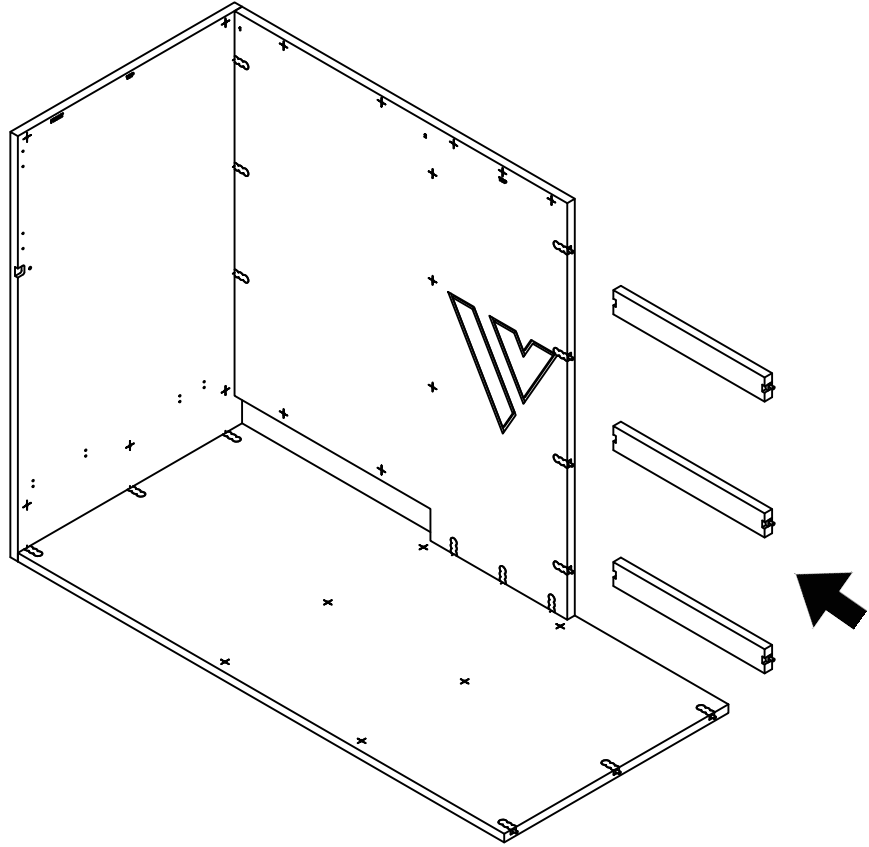


6

Combine drawer divider

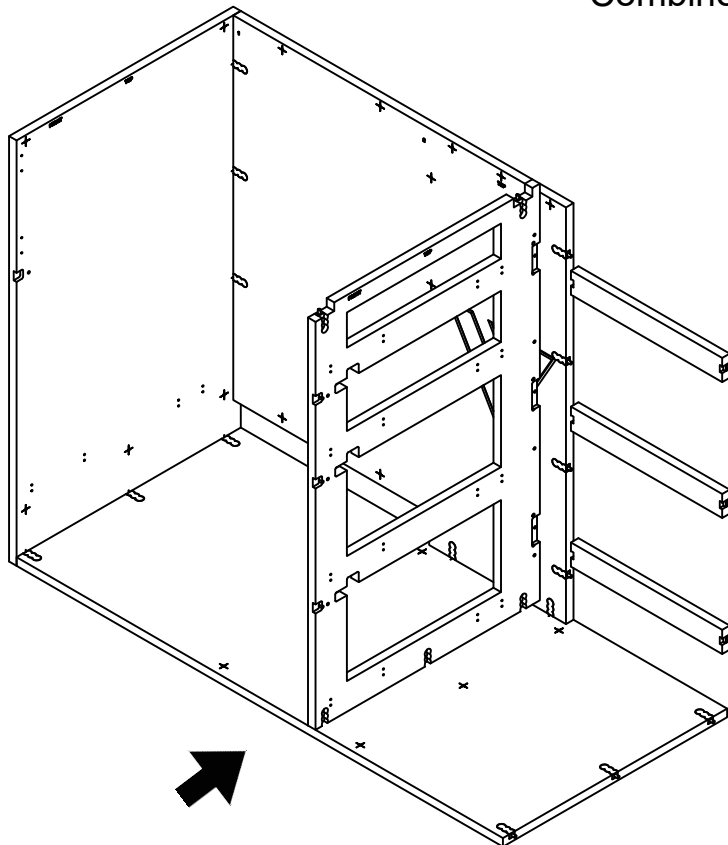


7

Combine appliance divider

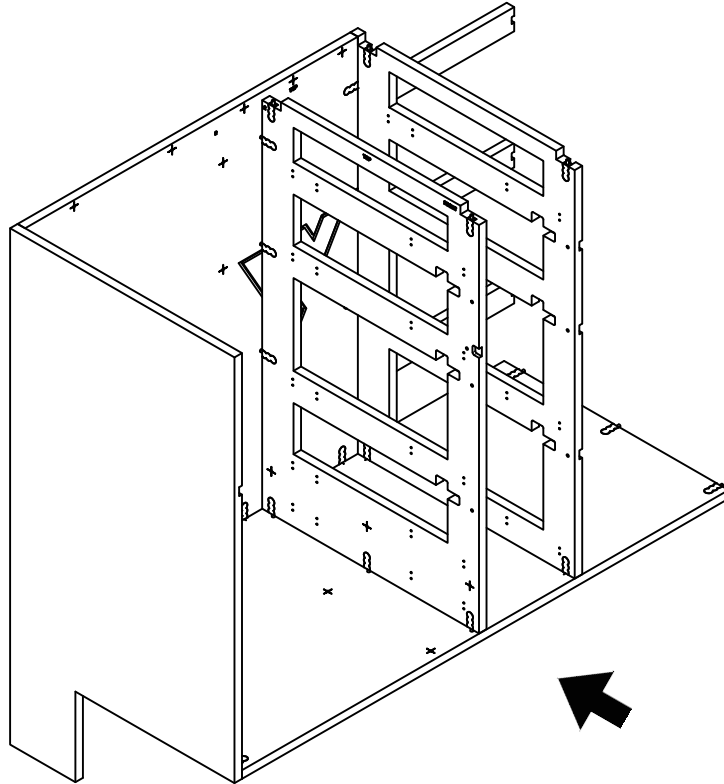


8

Combine Trash drawer false bottom

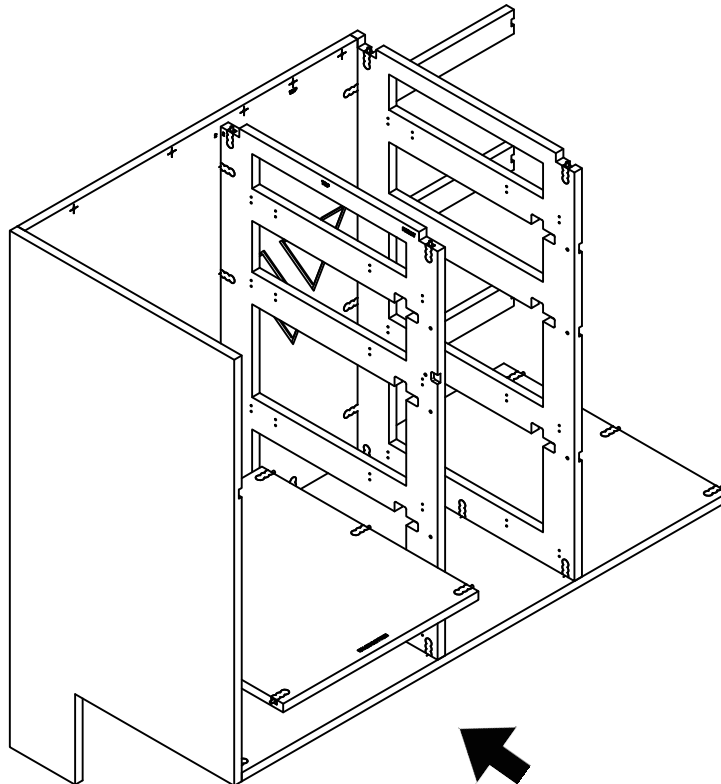


9

Combine top supports

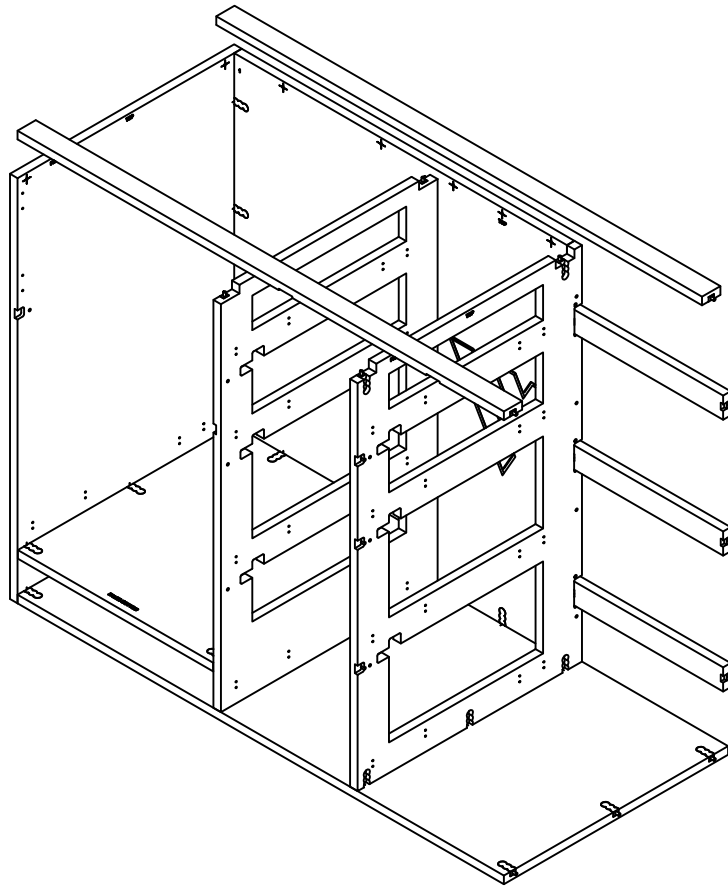


10

Combine out cap

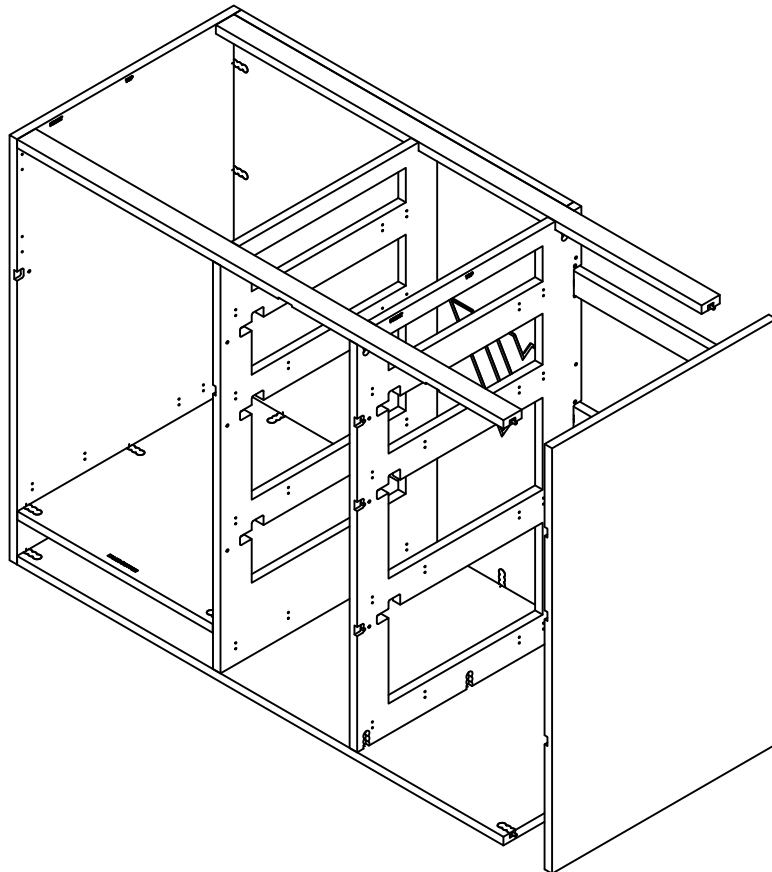


11

Mid small drawers
Combine drawer side 1 to front

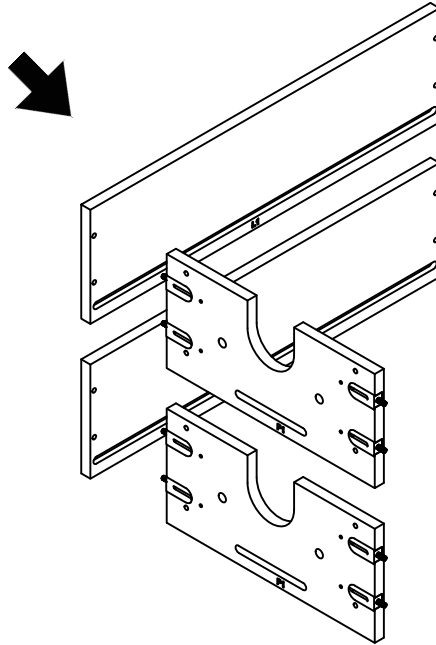


12

Mid small drawers
Combine drawer bottom

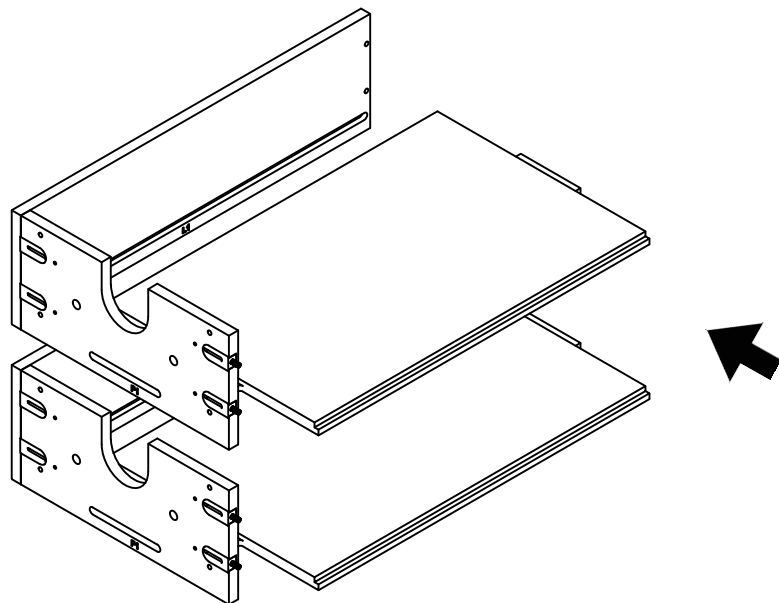


13

Mid small drawers
Combine drawer rear

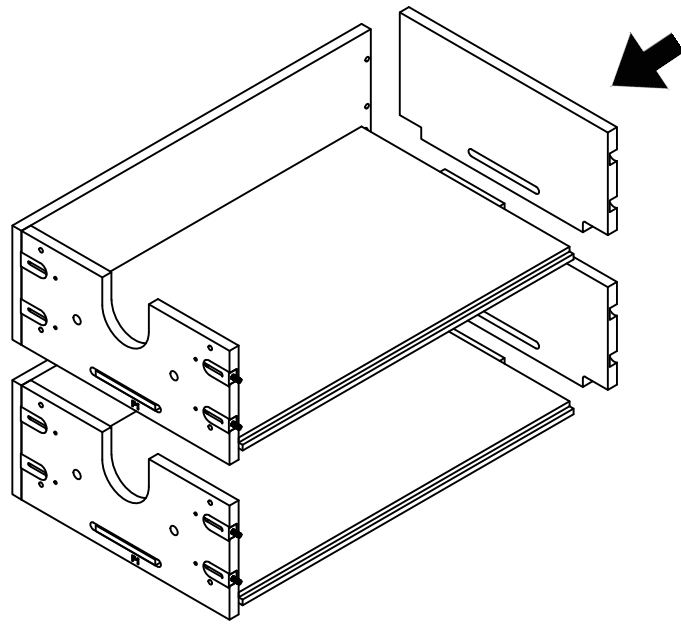


14

Mid small drawers
Combine drawer side 2

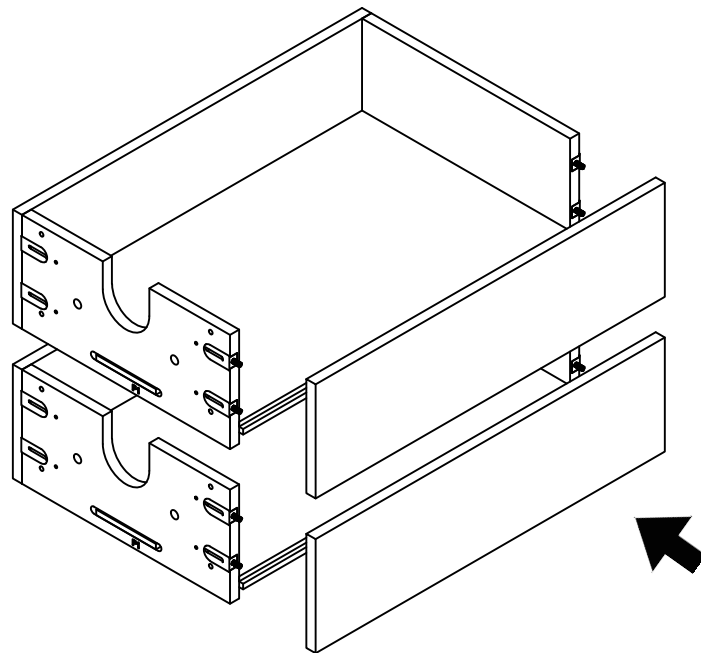


15

Mid small drawers
Combine drawer face

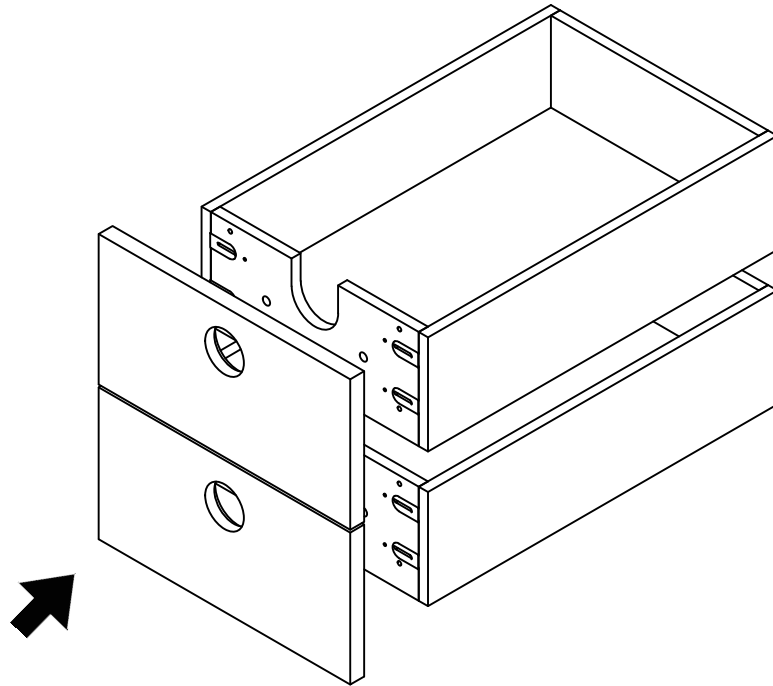


16

Mid small drawers
We got two drawers by following
step 11,12,13,14,15

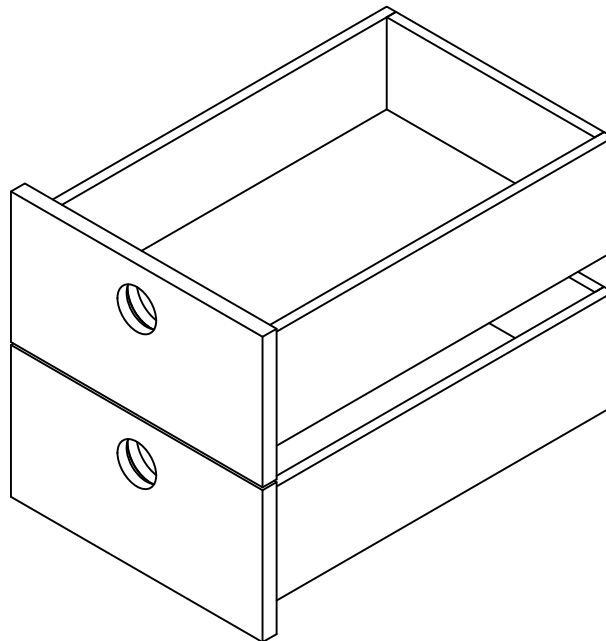


17

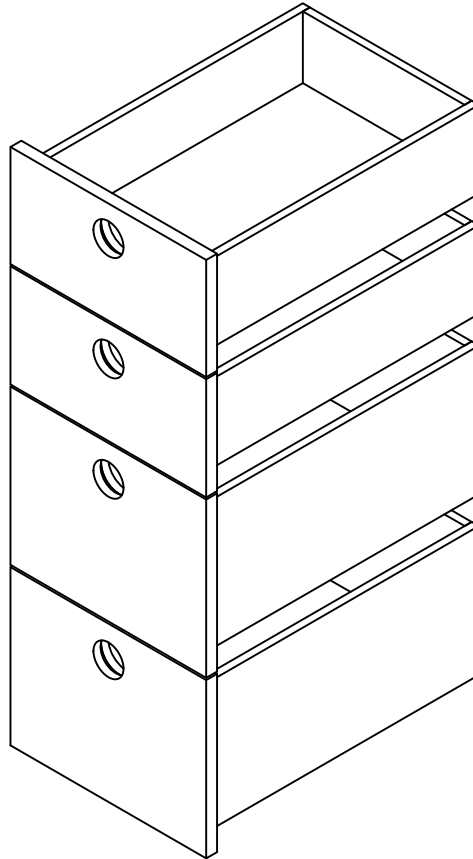

Mid large drawers
Repeat step 11,12,13,14,15
for two Mid large drawers


18

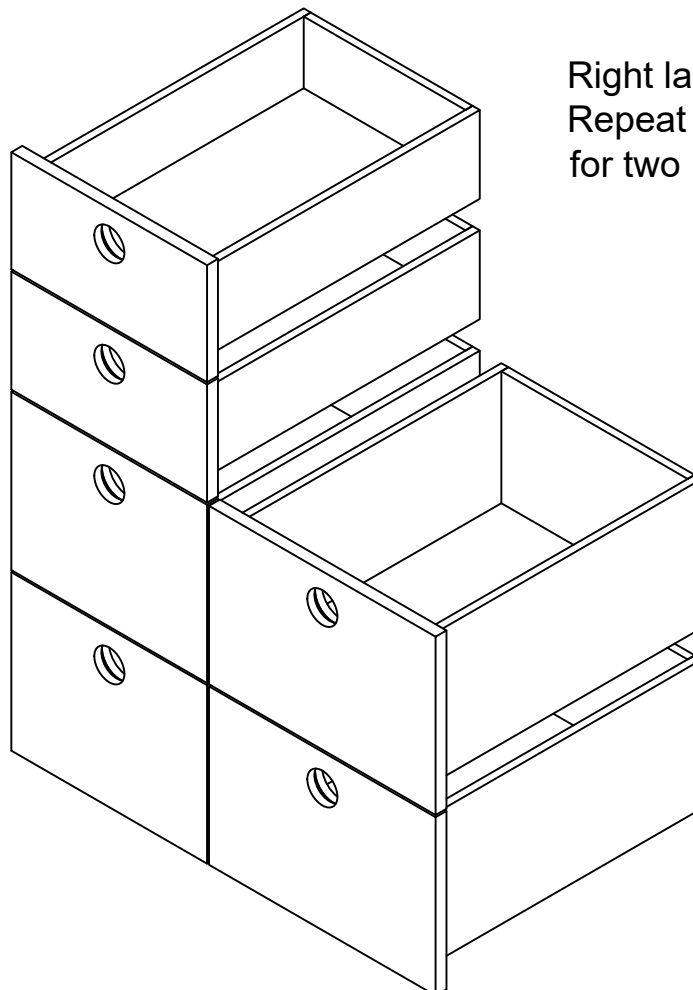

Right large drawers
Repeat step 11,12,13,14,15
for two Right large drawers


19

Right small drawers
Repeat step 11,12,13,14,15
for two right small drawers

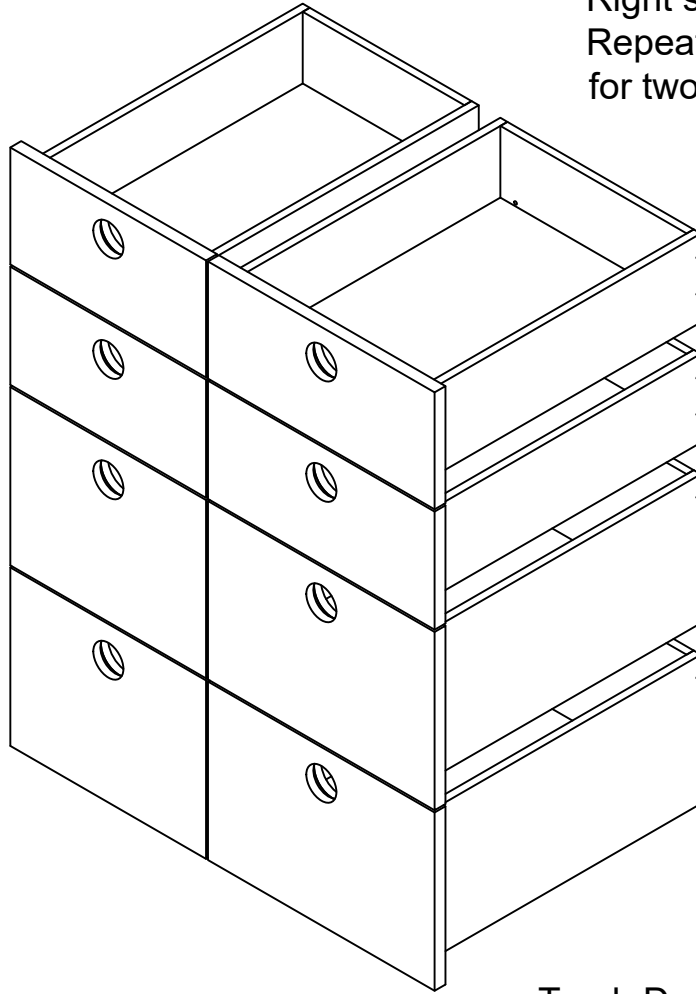


20

Trash Drawer
Combine drawer side 1 to front

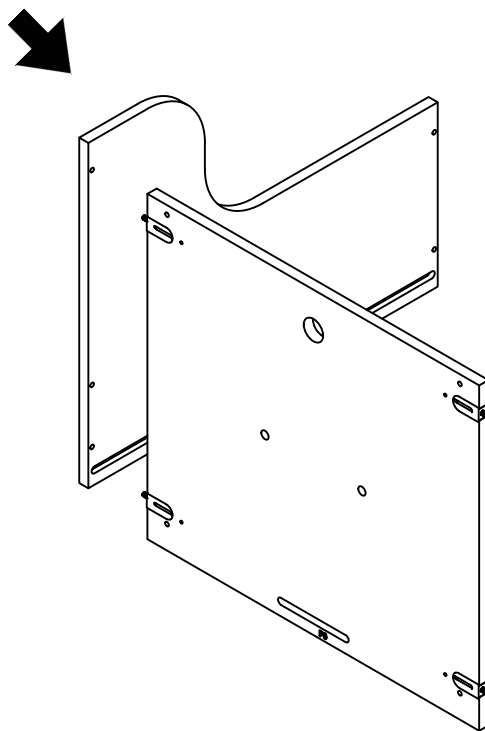


21

Trash Drawer
Combine drawer bottom

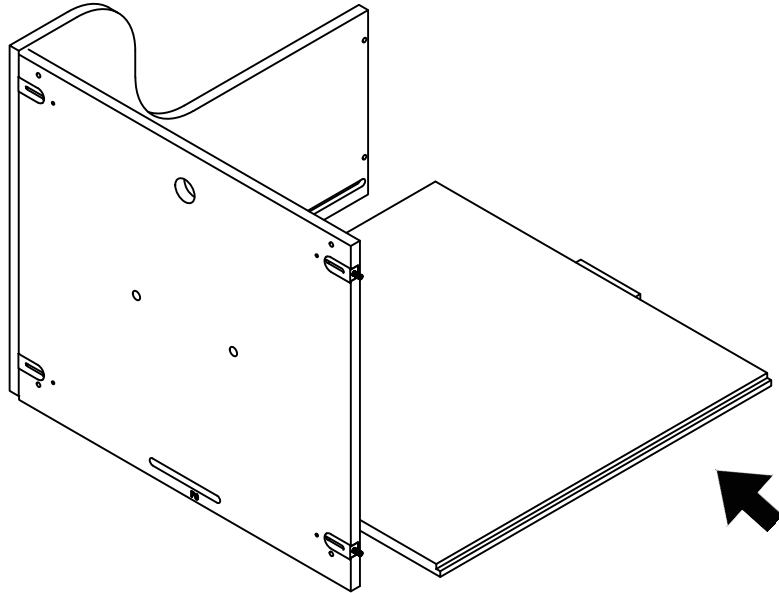


22

Trash Drawer
Combine drawer rear

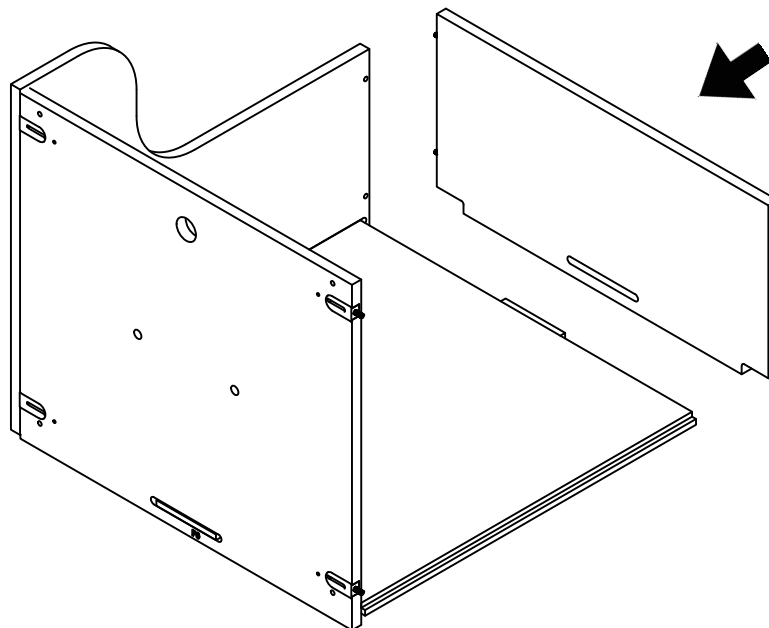


23

Trash Drawer
Combine drawer side 2

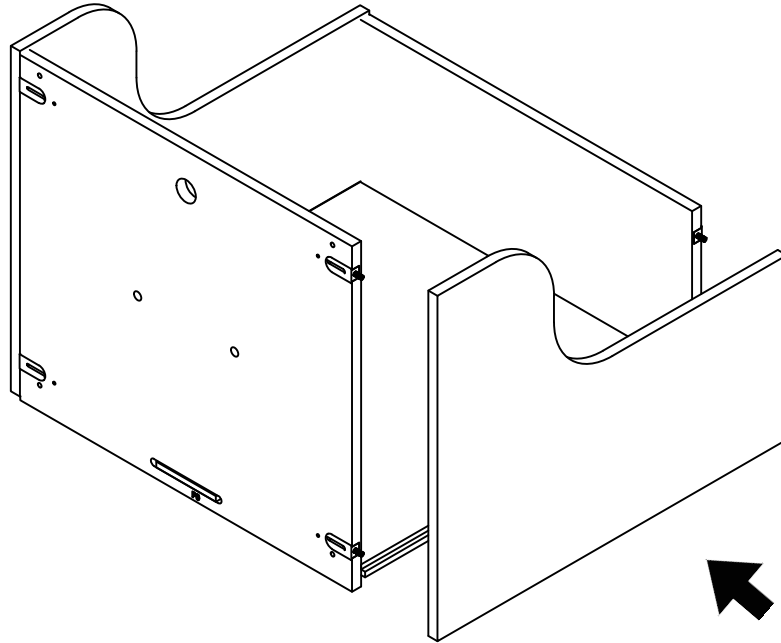


24

Trash Drawer
Combine drawer face

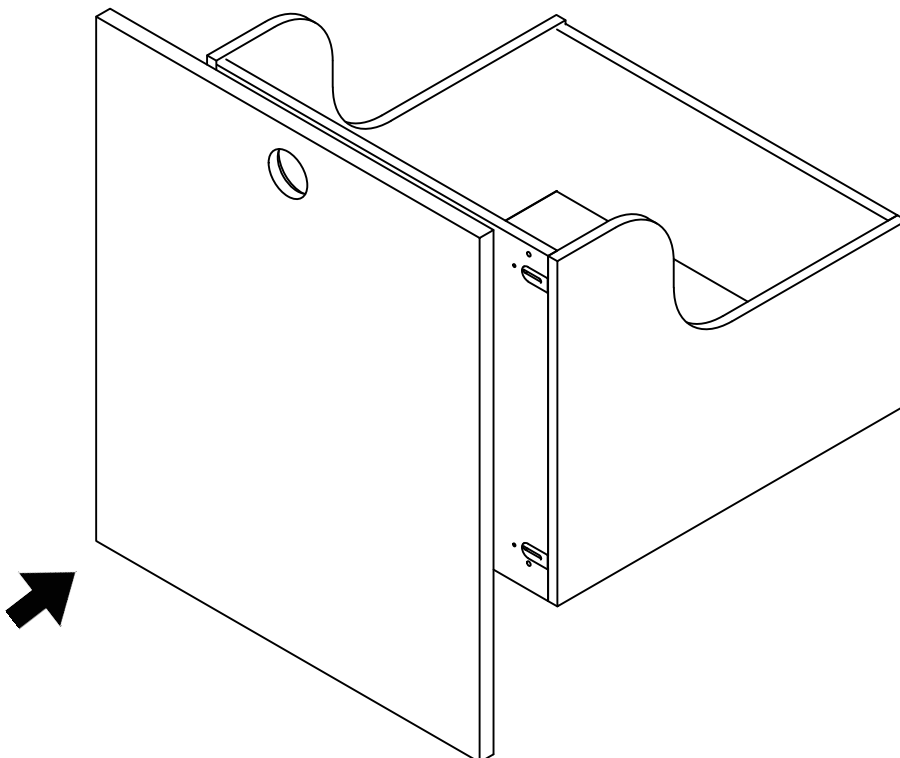


25

Install clips on the bottom of all 9 drawers

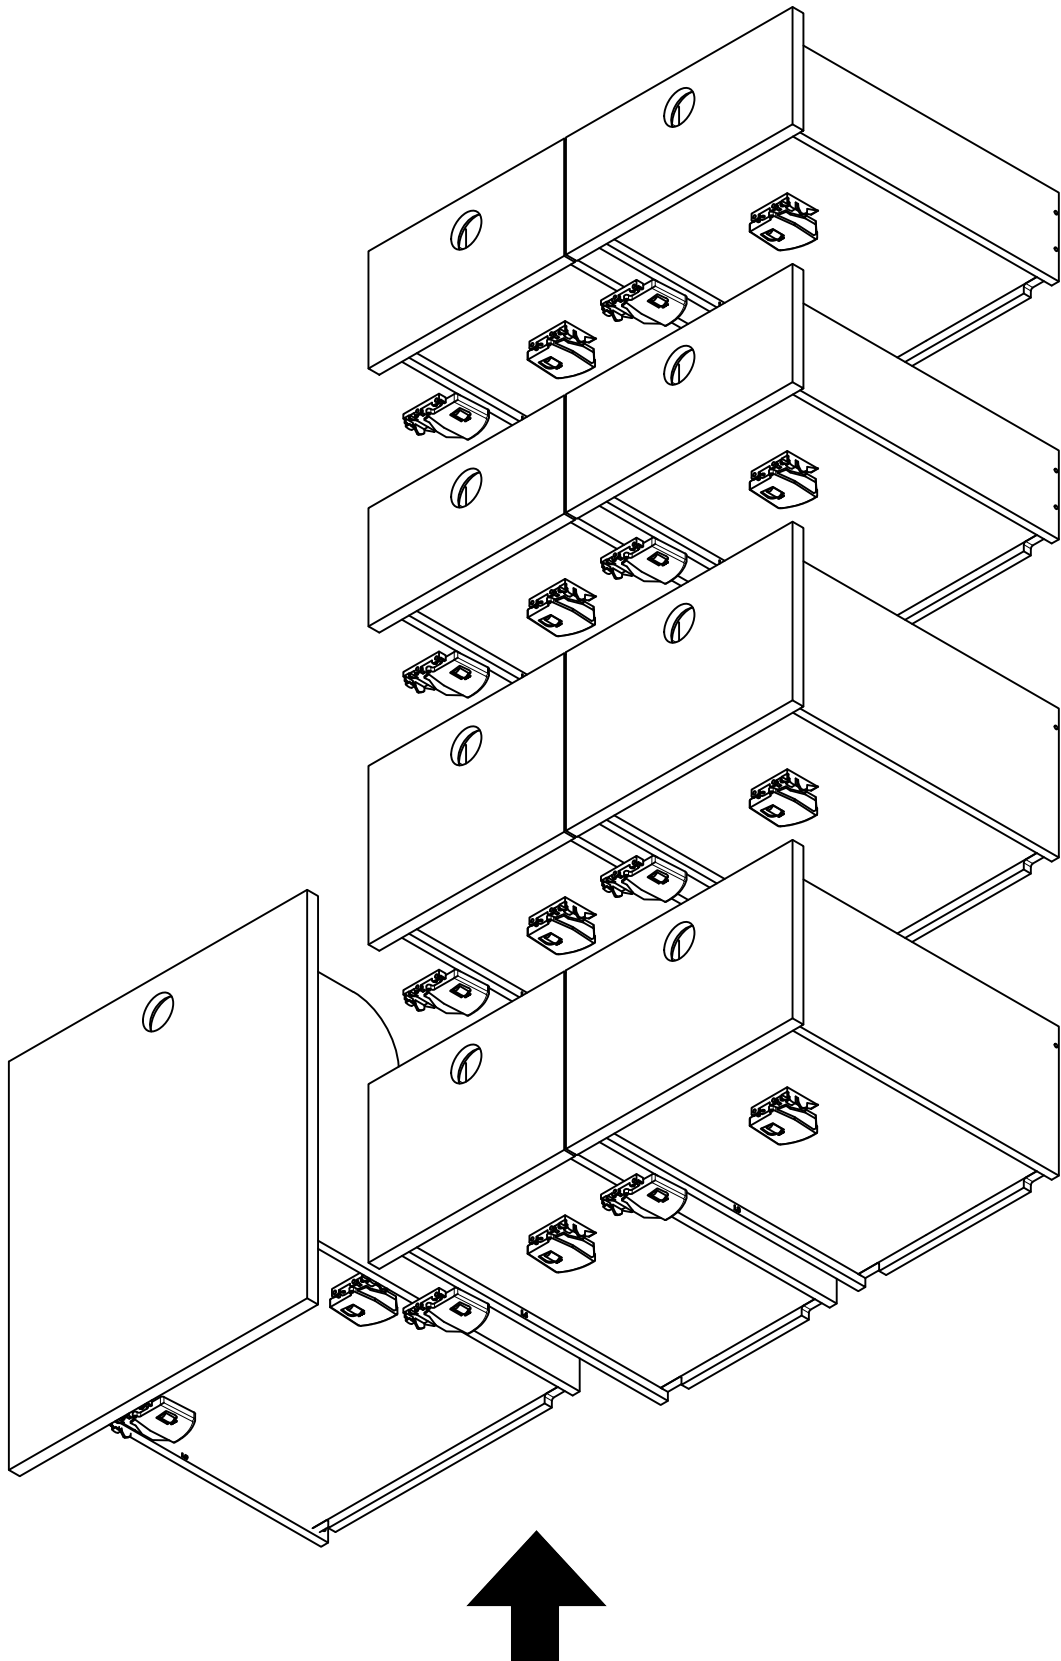


26

Install supports for drawers

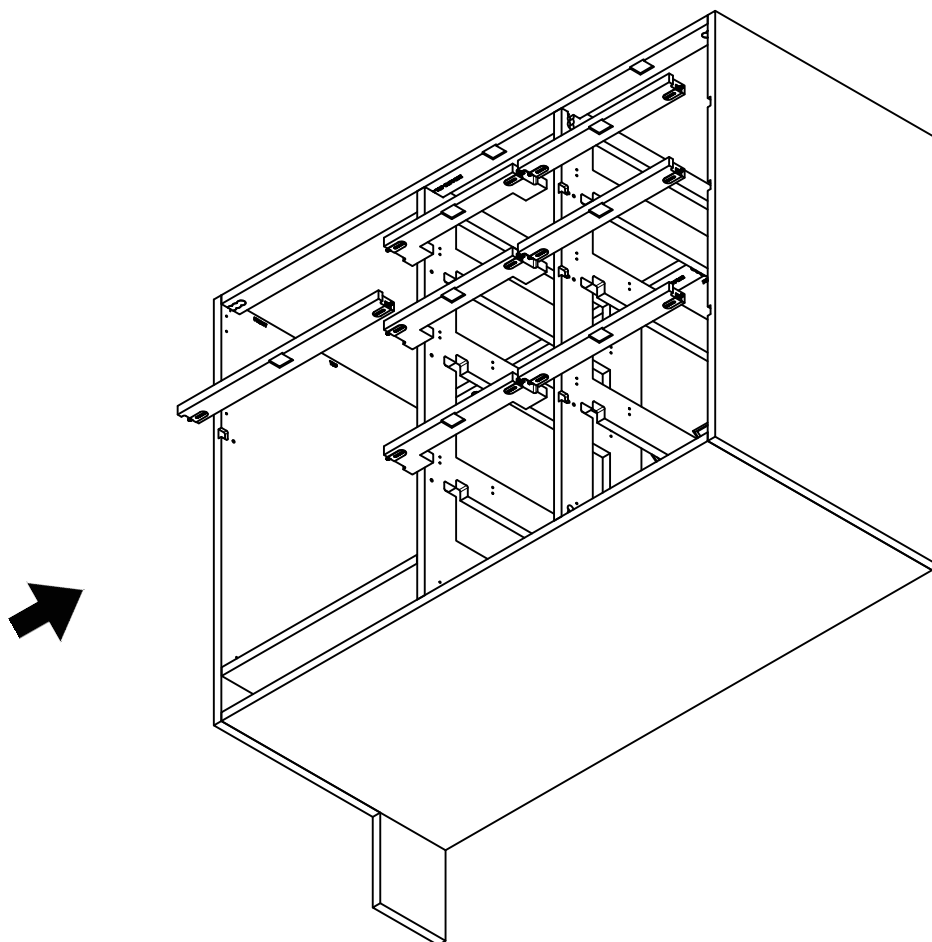


27

Install drawer slides by the help of pilot holes

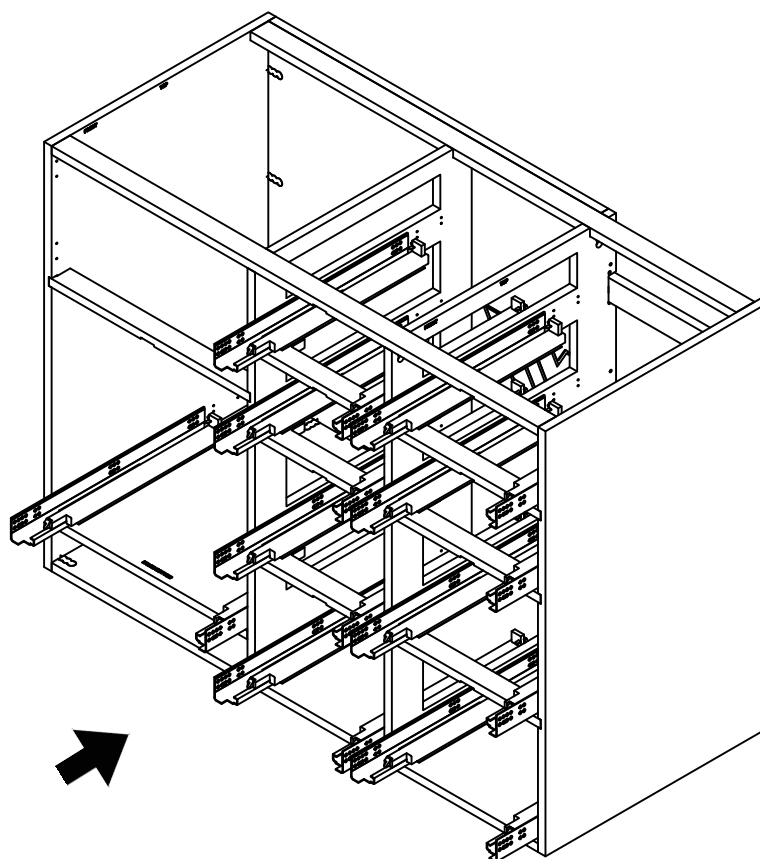


28

Slide drawers inside (make sure latches clip on the slides)

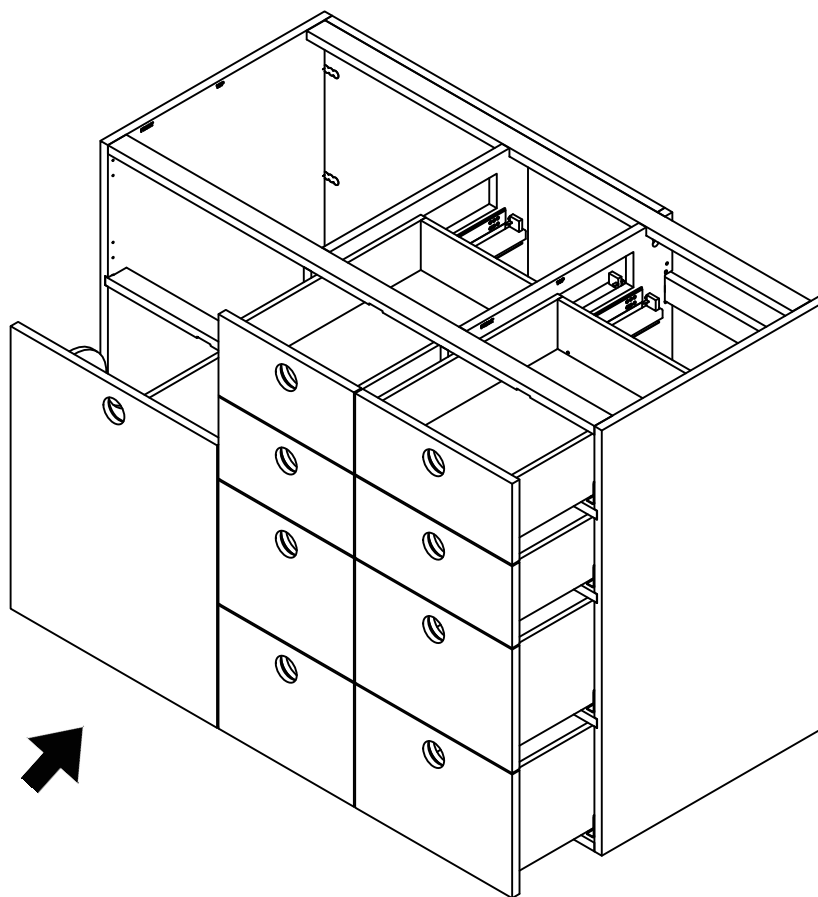


29

Combine trash drawer top door

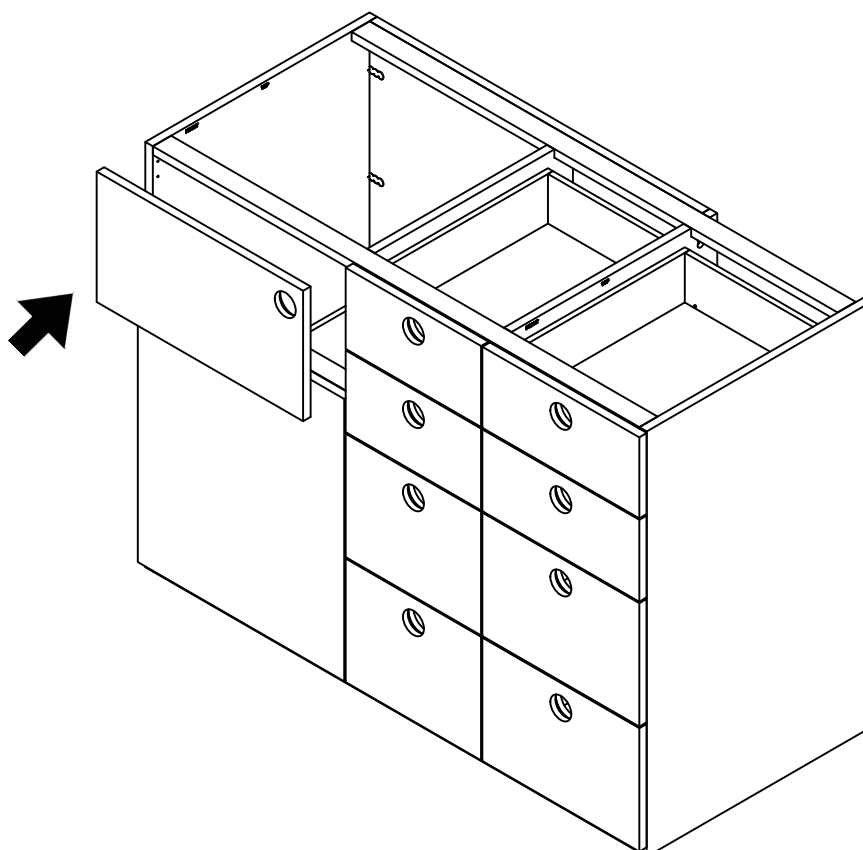

30

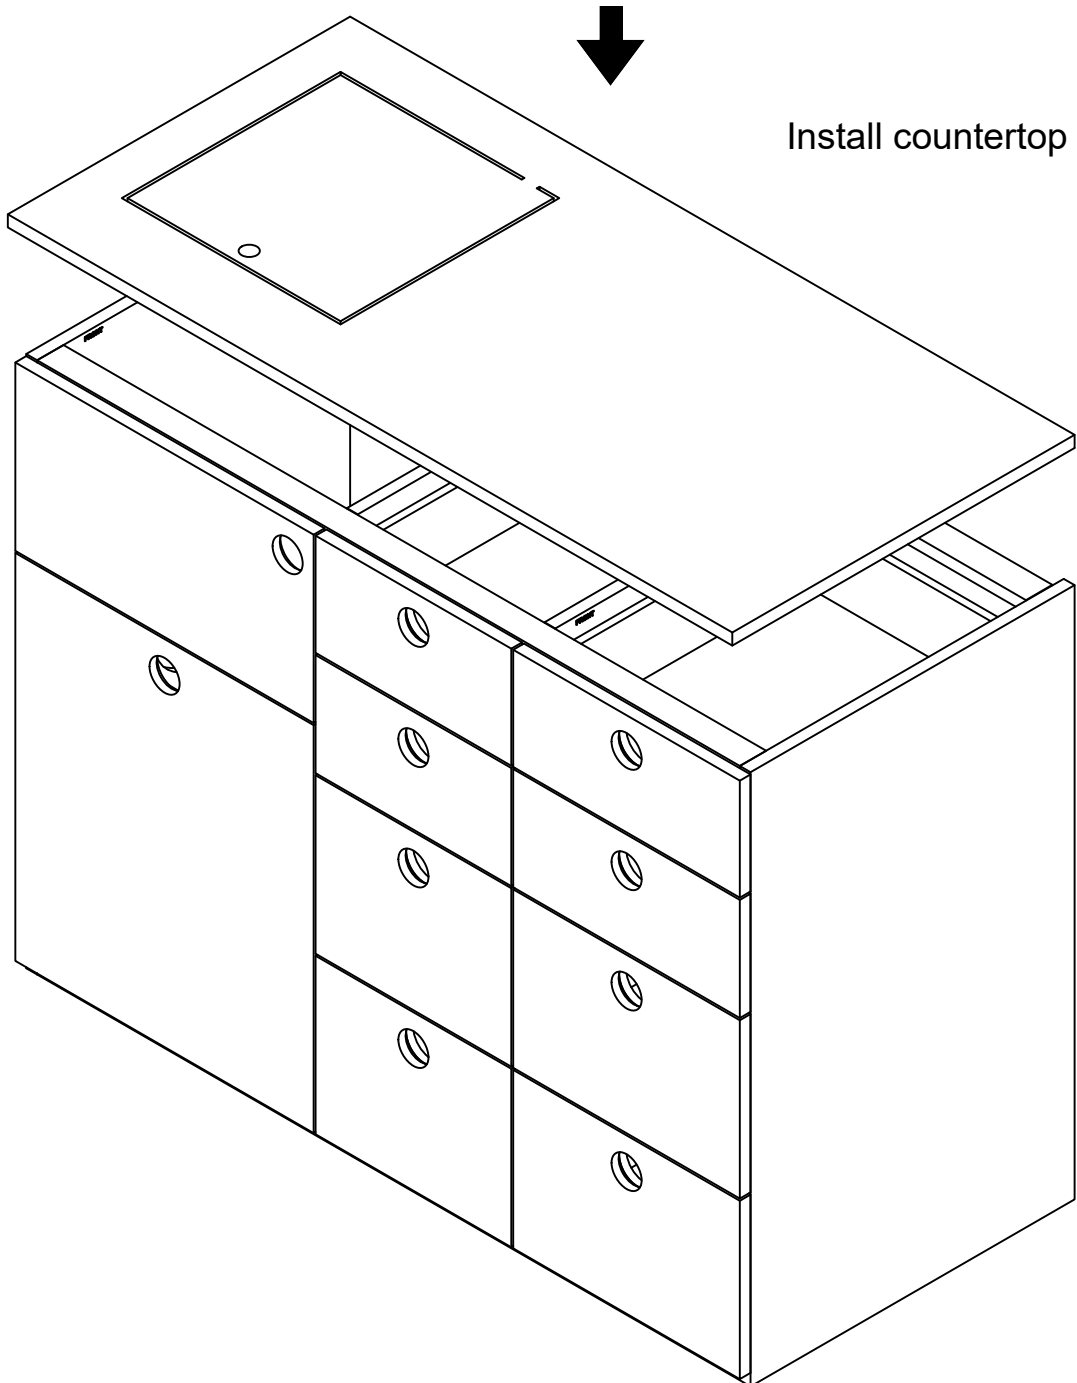

Install countertop